



Charter TV® Install Instructions

Let's Get Started!




1 Connect

For your High Definition TV

HDMI Connection*

Note: Not all cables will be used during the installation.

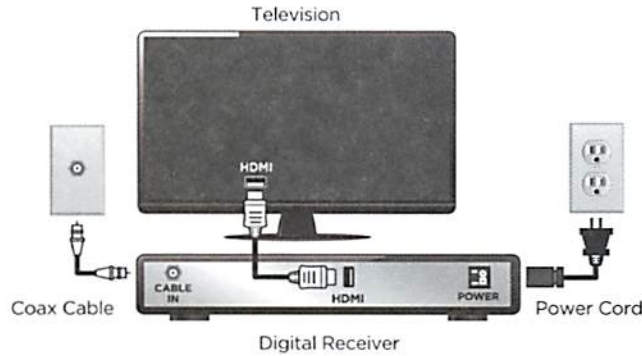

With your TV manufacturer's remote control, change the "input/source" setting on the TV to the proper connection type (HDMI or Component).


*If you do not have an HDMI input available on your TV, use the component cable with 5 color connectors to connect your digital receiver to your TV.

Visit charter.com/tvconnections for additional information and connection diagrams.

OR

Component Connection


Note: Not all cables will be used during the installation.

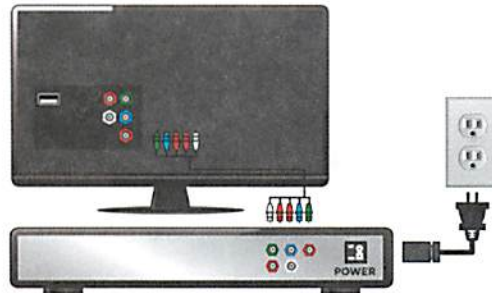

For your Standard Definition TV

Coax Connection

Note: Not all cables will be used during the installation.

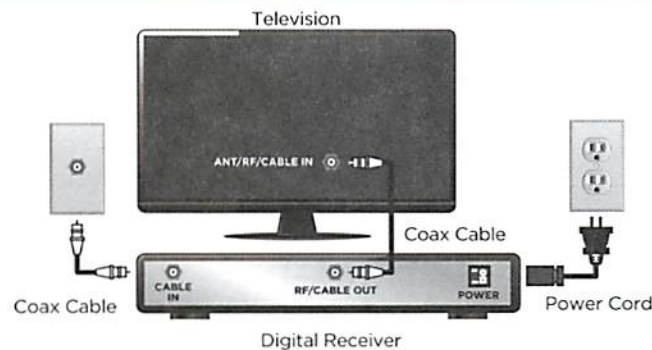

Change the input/source setting on the TV to "TV" (or "ANT," "RF," "Cable," or similar), and tune the TV to channel 3 or 4.

Visit charter.com/tvconnections for additional information and connection diagrams.

2 Sync Your Remote to Your TV

- Turn on your TV and press **TV** using the Charter remote.
- Press and hold **SET UP** until **TV** blinks twice.
- Press 9, 9, 1 (**TV** will blink twice).
- Press 1 (**TV** will blink twice).
- Press and release **CH+** until your TV turns off* (**TV** will blink each time **CH+** is pressed).
- Press **POWER** and then **SET UP** (if TV does not turn on, press **CH-** and release until the TV turns on, and then press **SET UP**).

*The CH+ key will send a signal to the TV to locate the code that operates your TV.

If you need more remote help or details, please visit www.charter.com/remotes or reference the user guide included with the remote.



3 Activate

Note: Once you are set up, if you notice that your picture doesn't fill the whole screen on most channels, you may wish to turn the HD Auto Tune feature off. Visit charter.com/hdautotune for more information.

- Please connect any additional digital receivers before proceeding.
- Confirm that your digital receiver is powered on.
- Go online or call to activate:
Visit <http://activate.charter.net/tv> and follow the activation steps that appear on your screen.

OR

Call 1-877-764-4054 and follow the prompts.

You will need your Charter account number: _____ and phone number: _____

4 Questions?

Please visit charter.com/selfinstall for additional information regarding your Charter TV Self-Installation including a video tutorial that may assist you in your set up.

For additional information about your equipment, guides and parental controls, please visit charter.com/support.




1 Conectar

Para tu Televisión en Alta Definición

Conexión HDMI*

Nota: No todos los cables se utilizarán durante la instalación.

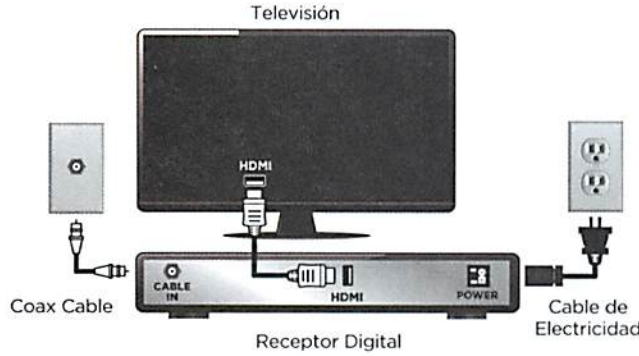

Con el control remoto del fabricante del televisor, cambia el "input/fuente" en el TV para el tipo de conexión adecuado (HDMI o por componentes).

*Si no tienes de conexión HDMI en tu TV, usa el cable cinco componentes de color proveído para conectar tu receptor digital a tu TV.

Visita charter.com/tvconnections para más información y para ver diagramas de conexión.

Conexión Componente


Nota: No todos los cables se utilizarán durante la instalación.



Para tu Televisión de Definición Estándar

Conexión Coax

Nota: No todos los cables se utilizarán durante la instalación.

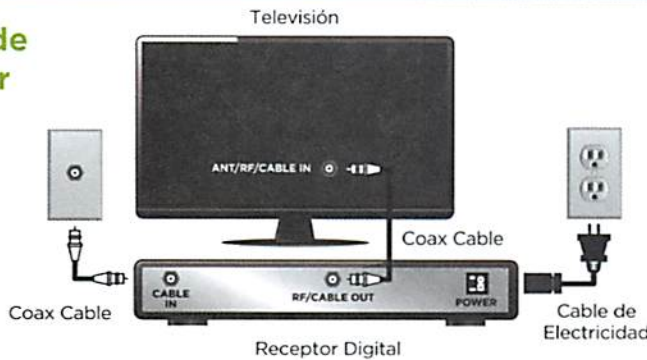

Cambia la configuración de entrada/fuente en la TV a "TV" (o "ANT", "RF", "Cable" o similar) y sintoniza la TV al canal 3 o 4.

Visita charter.com/tvconnections para más información y para ver diagramas de conexión.

2 Sincroniza tu control remoto a tu TV

- Enciende tu TV y presiona el botón **TV** utilizando el control remoto de Charter.
- Presiona y detiene el botón **SETUP** hasta que el botón **TV** se encienda dos veces intermitente.
- Presiona los números 9, 9, 1 (el botón **TV** se encenderá do veces).
- Presiona el número 1 (el botón **TV** se enciende dos veces).

El botón CH+ enviará señales al la TV para encontrar el código que opera tu TV.

- Presiona y suelta el botón **CH** hasta que la TV se apague* (el botón **TV** se encenderá intermitentemente cada vez que presiones el botón **CH**).

- Presiona el botón **POWER** y luego el botón **SETUP** (si tu TV no se prende, presiona y suelta el botón **TV** hasta que se prenda la TV, y entonces presiona el botón **SETUP**).

Si necesitas más ayuda o detalles sobre el control remoto por favor visita charter.com/remotes o referlate a la guía que acompaña tu control remoto de TV.



3 Activar

Nota: Una vez que estes configurado, si notas que la imagen no ocupa toda la pantalla del televisor en la mayoría de los canales, es posible que desees apagar la función de HD Tune Auto. Visita charter.com/hdautotune para más información.

- Por favor conecta los receptores digitales adicionales antes de continuar.
- Confirma que tu receptor digital este encendido.
- Visita en línea o llama para activar:
Visita <http://activate.charter.net/tv> y sigue los pasos de activación que aparecen en la pantalla.

Llama 1-877-764-04054 y sigue las instrucciones.

Necesitaras tu número de cuenta de Charter: _____ y número de teléfono: _____

4 ¿Preguntas?

Por favor visita charter.com/selfinstall para obtener información adicional acerca de tu Charter TV auto instalación incluyendo un tutorial de video que puede ayudarte con la configuración.

Para información adicional acerca de tu equipo, guías y controles parentales, por favor visita charter.com/support.